

# READING PINNACLE BOILER SERIAL NUMBERS

And PP models

FIRST LETTER

SECOND LETTER

JANUARY	A	1994	A
FEBRUARY	B	1995	B
MARCH	C	1996	C
APRIL	D	1997	D
MAY	E	1998	E
JUNE	F	1999	F
JULY	G	2000	G
AUGUST	H	2001	H
SEPTEMBER	I	2002	I
OCTOBER	J	2003	J
NOVEMBER	K	2004	K
DECEMBER	L	2005	L
		2006	M
		2007	N
		2008	O
		2009	P

REV 0

} overlap

REV 1

REV 2

REVO -

**BLACK - REV 0**

**BLUE - REV 1**

**RED - REV 2**

\* Display w/ readout = Rev 1/2

\* Flashing error = Rev 0 (ASME)

**EXAMPLE SERIAL NUMBER J 2 6 K 5 4 2 6**

This boiler would be from October of 2004 making it a Rev 1